



Tolleranza di serraggio / tolerance on torque value
General: 0 /-20% (*) 0/-10%

| | KIT 111 | KIT 345 | KIT 346 | KIT 348 | KIT 350 | KIT 351 |
|-----------------------------|--|---|-------------------------|---|---|--------------------------|
| DENOMINAZIONE - DESCRIPTION | ANELLI RADIALI GUIDE PLUNGER RODS SEALS | VALVOLE A/M + OR CHECK VALVES + O-RING | GUARNIZIONI PACKINGS | GUARNIZIONI+LANTERNE PACKINGS+GLANDS | TAPPI VALVOLA + OR VALVE CAPS + O-RING | TENUTE OLIO OIL SEALS |
| CODICE - CODE | 53.9817.97.3 | 53.9830.97.3 | 53.9831.97.3 | 53.9833.97.3 | 53.9835.97.3 | 53.9836.97.3 |
| COMPONENTI - COMPONENTS | ■ | ▲ | ● | ▼ | ◆ | ■ |
| N° PZ - N° PCS | 3 | 18 | 18 | 24 | 12 | 12 |