



Tolleranza di serraggio / tolerance on torque value
 General: 0 /-20% (*) : 0/-10%

	KIT 37	KIT 67	KIT 309	KIT 310	KIT 123	KIT 415	KIT 199	KIT 249
DENOMINAZIONE - DESCRIPTION	ANELLI RADIALI GUIDE PLUNGER RODS SEALS	TAPPI VALVOLA + OR VALVE CAPS + O-RING	GUARNIZIONI PACKINGS	GUARNIZIONI+LANterne PACKINGS+GLANDS	VALVOLE A/M + OR CHECK VALVES + O-RING	TENUTE OLIO OIL SEALS	PACCO GUARNIZIONI H.W. H.W. PACKINGS SYSTEM	VALVOLE H.W. H.W. CHECK VALVES
CODICE - CODE	06.9814.97.3	04.9839.97.3	06.9962.97.3	06.9963.97.3	06.9867.97.3	06.9990.97.3	06.9883.97.3	06.9956.97.3
COMPONENTI - COMPONENTS	■	▲	●	▼	□	Δ		
N° PZ - N° PCS	3	12	18	24	12	10	24	18